

USER' S MANUAL

SINGLE PHASE, LOWER VOLTAGE

HYBRID INVERTER


F-IVT101



Appliances



PC

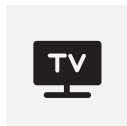


TV



Air-conditioning



Fridge

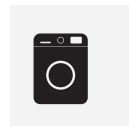

Washingmachine

CATALOGUE

ABOUT THIS MANUAL	1
Purpose	1
Scope	1
SAFETY INSTRUCTIONS	1
INTRODUCTION	2
Features	2
Basic System Architecture	2
Product Overview	3
INSTALLATION	4
Unpacking and Inspection	4
Preparation	4
Mounting the Unit	4
Batery Connection	5
AC Input/Output Connection	7
Final Assembly	10
Communication Connection	11
OPERATION	12
Power ON/OFF	12
Operation and Display Panel	12
LCD Setting	15
Fault Reference Code	22
Warning Indicator	23
Operating Mode Description	24
Display Setting	25
SPECIFICATIONS	26
Table 1 Line Mode Specificaations.....	26
Table 2 Inverter Mode Specificaations.....	27
Table 3 Charge Mode Specificaations.....	27
Table 4 General Specificaations.....	28
Appendix:Approximate Back-up Time Table	30

ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

The following cases are not within the scope of warranty

- (1) Out of warranty.
- (2) Series number was changed or lost.
- (3) Battery capacity was declined or external damaged.
- (4) Inverter was damaged caused of transport shift, remissness , ect external factor
- (5) Inverter was damaged caused of irresistible natural disasters.
- (6) Not in accordance with the electrical power supply conditions or operate environment caused damage.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION**-- To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wiring before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION**-- Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuses (1 piece of 150A, 63VDC for 5.2KW and 1 piece of 200A, 63VDC for 3KW) are provided as over-current protection for the battery supply.
11. **GROUNDING INSTRUCTIONS**-- This inverter/charge should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

INTRODUCTION

This is a multi-function inverter/charge, combining functions of inverter, solar charger and battery charger to offer uninterrupted power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

Features

Pure sine wave inverter

Configurable input voltage range for home appliances and personal computers via LCD setting

Configurable battery charging current based on applications via LCD setting

Configurable AC/Solar Charger priority via LCD setting

Compatible to mains voltage or generator power

Auto restart while AC is recovering

Overload/Over temperature/short circuit protection

Smart battery charger design for optimized battery performance

Cold start function

Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:



Generator or Utilit.

PV modules(option)

Consult with your system integrator for other possible system architectures depending on your requirements. This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.



Product Overview

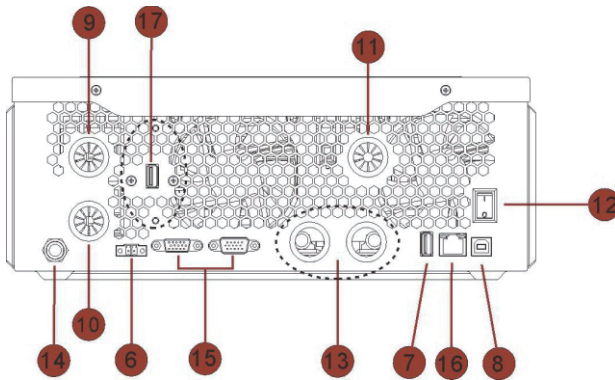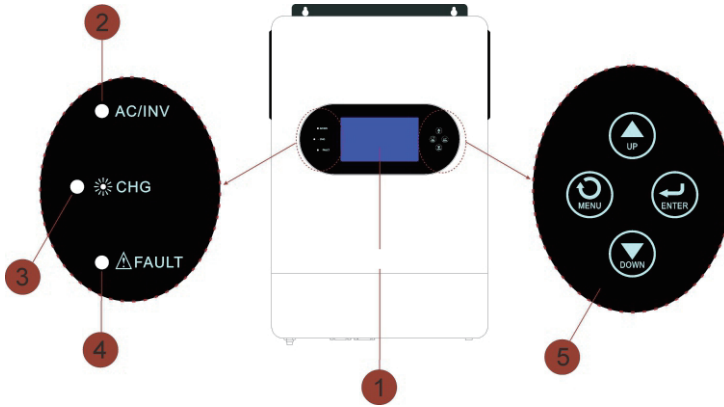

- | | |
|--|------------------------------|
| 1. LCDdisplay | 2. Status indicator |
| 3. Char gingindicator | 4. Fault indicator |
| 5. Functions buttons | 6. Dry contact |
| 7. USB 1 | 8. USB 2 |
| 9. AC input | 10. AC output |
| 11. PV input | 12. Power on/ Off switch |
| 13. Battery input | 14. Circuit breaker |
| 15. Parallel communication port
(only for parallel model) | 16.RS-485 communication port |
| 17. USB WIFI | |

INSTALLATION

Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:


The unit x 1

User manual x 1

USB cable x 1


Preparation

Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

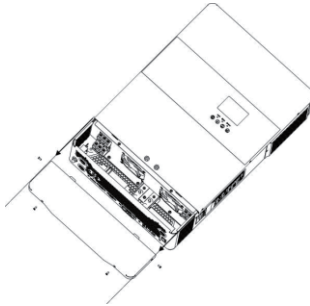

Mounting the Unit

- Consider the following points before selecting where to install:
Do not mount the inverter on flammable construction materials.
- Mount on a solid surface.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- For proper air circulation to dissipate heat, allow a clearance of approx. 200 mm to the side and approx. 300 mm above and below the unit.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

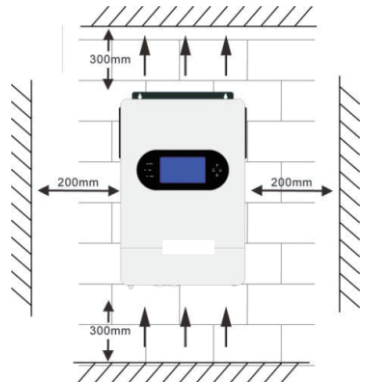

SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

 
Tighten two screws to install the device. M4 or M5 screws are recommended. (If necessary, add two more screws to the lower support feet of the chassis. / If spare parts are available, open the lower cover of the cable connection.)



Series products, picture size for reference, specific installation, please trace the point of drilling

Battery Connection

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

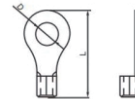

WARNING! All wiring must be performed by a qualified personnel.


WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Recommended battery cable and terminal size:


Model	Typical Amperage	Battery Capacity	Torque Value
2KW DC24V	84V	100AH	1*4AWG
		200AH	2*6AWG
3KW DC24V	125A	100AH	1*4AWG
		200AH	2*6AWG
3KW DC48V	63A	200AH	1*4AWG
			2*6AWG
4KW DC48V	84A	200AH	1*4AWG
			2*6AWG
5KW DC48V	105A	200AH	1*4AWG
			2*6AWG
5.2KW DC48V	108A	200AH	1*4AWG
			2*6AWG


Please follow below steps to implement battery connection:


1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery for 3kW to 5.2KW model ; at least 100Ah capacity battery for 2KW to 3KW.

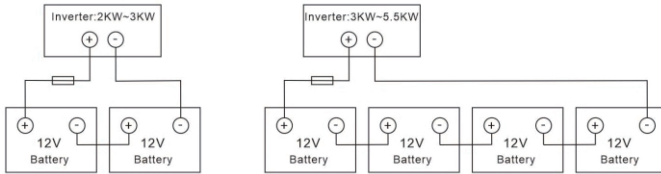




3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tight with torque of 2-3 NM. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.

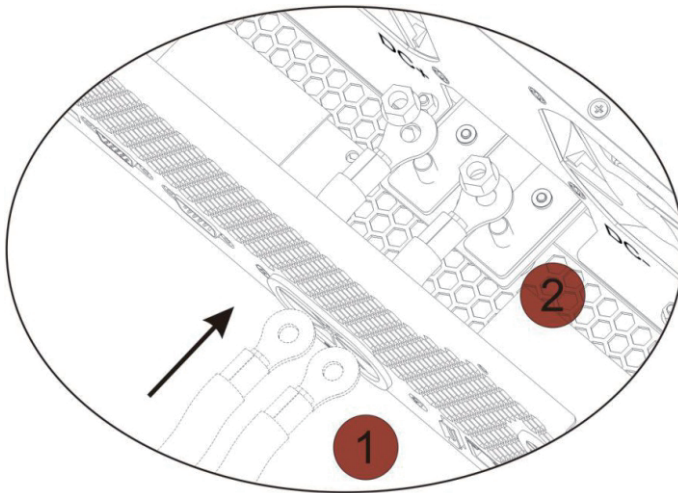

	<p>WARNING: Shock Hazard Installation must be performed with care due to high battery voltage in series</p>
---	--

	<p>CAUTION!! Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, overheating may occur.</p> <p>CAUTION!! Do not apply anti-oxidant substance on the terminals before terminals are connected tightly</p> <p>CAUTION!! Before making the final DC connection or closing DC breaker/ disconnecter, be sure positive(+) must be connected to positive (+) and negative (-) must be connected to negative (-).</p>
---	--

AC Input/Output Connection

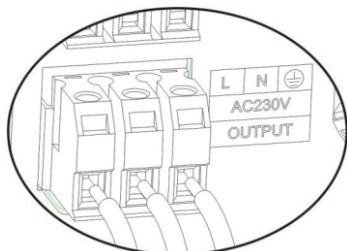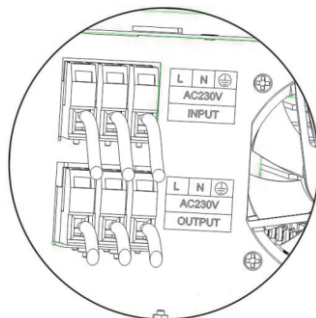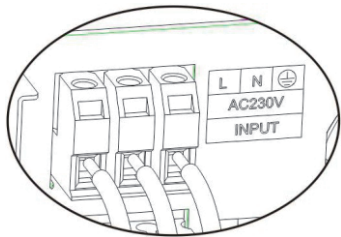

Ground (yellow-green)

L LINE (brown or black)

N Neutral (blue)

CAUTION!! Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 30A for 3KW, 40A for 5.2KW.

CAUTION!! There are two terminal blocks with "IN" and "OUT" markings. Please do NOT-misconnect input and output connectors.

WARNING! All wiring must be performed by a qualified personnel.


WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.


Suggested cable requirement for AC wires


Model	Gauge	Torque Value
5.2KW DC48V	8 AWG	1.2~ 1.6Nm

Please follow below steps to implement AC input/output connection:


1. Before making AC input/output connection, be sure to open DC protector or disconnecter first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor first.


- L→LINE (brown or black)
- N→Neutral (blue)
- →Ground (yellow-green)

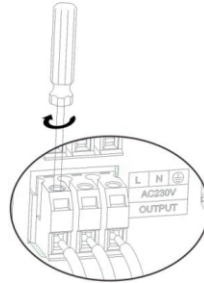

WARNING:
 Be sure to that AC power source is disconnected before attempting to hardwire it to the unit.

4.Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor first.

- L→LINE (brown or black)
- N→Neutral (blue)
- →Ground (yellow-green)

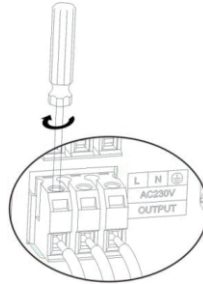

5.Make sure the wires are securely connected.

CAUTION: Important
 Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

PV Connection

CAUTION: Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection.

To reduce risk of injury, please use the proper recommended cable size as below.

Model	Typical Amperage	Cable Size	Torque
5.2KW DC48V	60A/80A	8AWG	1.2~ 1.6Nm

INSTALLATION

PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.
3. Max. Power Voltage (Vmpp) of PV modules should be close to best Vmp of inverter or within Vmp range to get best performance. If one PV module can not meet this requirement, it's necessary to have several PV modules in series connection. Refer to below table.

Note:* Vmp: panel max power point voltage.The PV charging efficiency is maximized while PV system voltage is close to Best Vmp.

Maximum PV module numbers in Series: Vmpp of PV module*X pcs = Best Vmp of Inverter or Vmp range

PV module numbers in Parallel: Max. charging current of inverter/Impp

Total PV module numbers=maximum PV module numbers in series*PV module numbers in parallel

Solar Charging Mode (MPPT)		
INVERTER MODEL	2~3KW DC24V	3KW~5.2KW DC48V
Rated Power	1500W 2500W	3000W 4000W 5200W
MPPT controller		
PV Charge Current	60A	80A
Max. PV Array Open Circuit Voltage	150Vdc	450Vdc
PV Array MPPT Voltage Range	30~140Vdc	150~430Vdc
PV The minimum charging battery voltage	17Vdc	34Vdc

Recommended PV module configuration(3KW-5.2KW DC48V Inverter as an example)

Maximum Power(Pmaxl):425W	250W	Maximum number of PV modules in series 10→30.9V×10=280~377V
Max.Power Voltage Vmpp(V)	30.9V	
Max. Power Current Impp(A)	8.42A	Number of PV modules connected in parallel 2→ 8.42 A*2=16.84A
Open Circuit Voltage Voc(V)	37.7V	
Short Circuit Current Isc(A)	8.89A	Total photovoltaic series quantity 2×10=20

Solar panel installation diagram



Open Circuit Voltage $40.65 \times 11 = 447.15 < 450\text{VDC}$ (PV MAX=450 VDC)



 
INSTALLATION

Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors
2. Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

PV+ → pole (+)


PV- → pole (-)

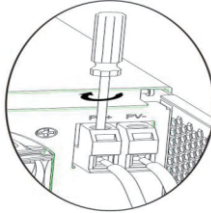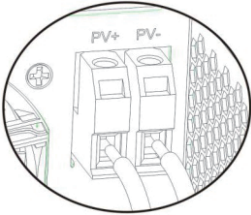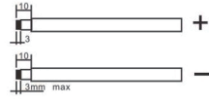

4. Make sure the wires are securely connected.

Final Assembly

After connecting all wirings, please put bottom cover back by screwing three screws as shown below.

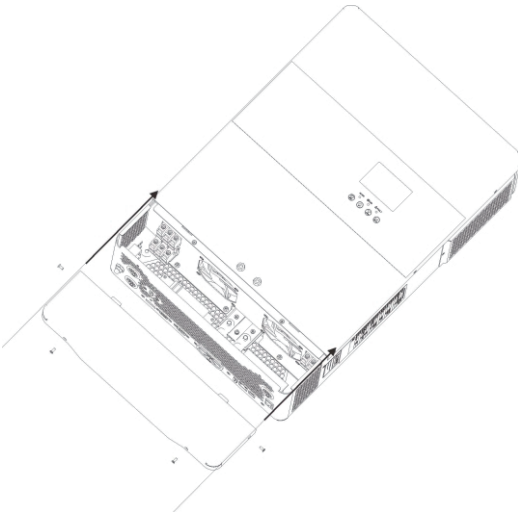

tion Connection

Please use supplied communication cable to inverter and PC. Download the soft are by link on the last page of this manual into computer and follow on screen instruction to install the monitoring soft are.


For the detailed soft are operation, please consult the seller if you have any questions.

WARNING: It's forbidden to use network cable as the communication cable to directly communicate with the PC port. Otherwise, the internal components of the controller will be damaged.

WARNING: RJ45 interface is only suitable for the use of the company's supporting products or professional operation.

Below chart show R45 Pins definition

Pin	Definition
1	RS-485-B
2	RS-485-A
3	GND
4	CAN1H(BMS)
5	CAN1L(BMS)
6	GND
7	CAN2L
8	CAN2H

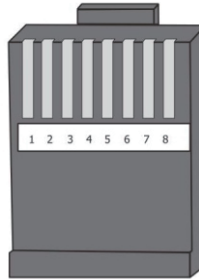


Dry Contact Signal

There is one dry contact (3A/250VAC) available on the rear panel. It could be used to deliver signal to external device when battery voltage reaches warning level.

Unit status	Condition			Dry contact port:	
Power Off	Unit is off and no output is powered.			NC&C	NO&C
				Close	Open
Power On	output is powered from Utility			Close	Open
	Output is powered from Battery or Solar.	Program 01set as utility	Batery voltage<Low DC warning voltage	Open	Close
			Batery voltage>Setting value in Program 21 or batery charging reaches floating stage	Close	Open
		Program 01 is set as SBU,SUB, solar first	Batery voltage<Setting value in Program 20	Open	Close
			Batery voltage>Setting value in Program 21 or batery charging reaches floating stage	Close	Open

OPERATION

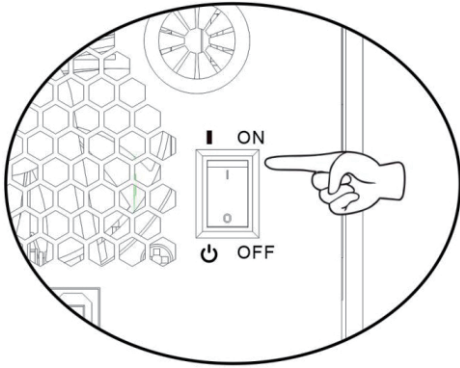


Power ON/OFF

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

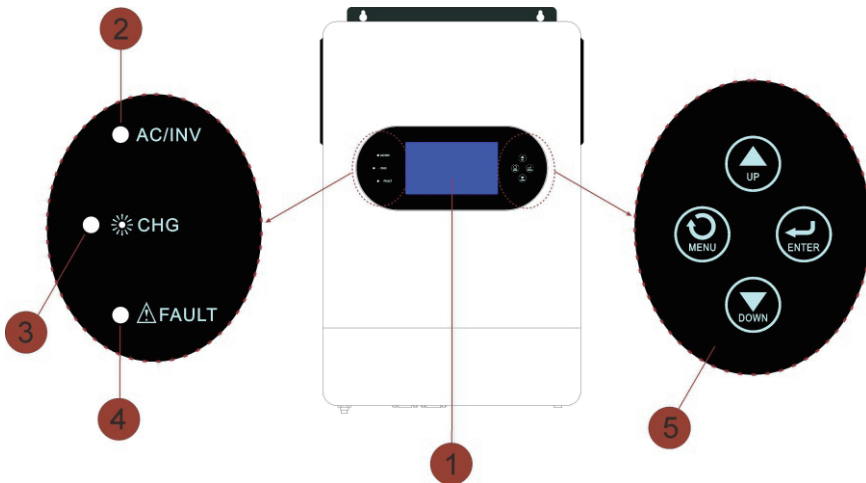


LED Indicator

LED Indicator		Messages	
AC/INV	Green	Solid On	Output is powered by grid in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
● CHG	Yellow	Flashing	Battery is charging or discharging.
☒ FAULT	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

Function Keys



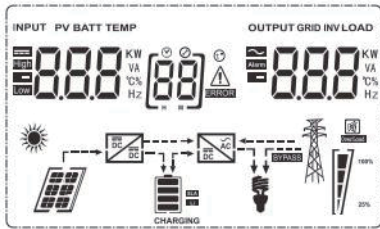

Function Keys	Description
MENU	Enter reset mode or setting mode go to previous selection.
UP	Increase the setting data.
DOWN	Decrease the setting data.
ENTER	Enter setting mode and Confirm the selection in setting mode go to next selection or exit the reset mode.

LCD Display Icons



Icon	Function description
Input Source Information and Output Information	
	Indicates the AC information
	Indicates the DC information
	Indicate input voltage, input frequency, PV voltage, battery voltage and charger current. Indicate output voltage, output frequency, load in VA, load in Watt and discharging current.
Configuration Program and Fault Information	
	Indicates the setting programs
	Indicates the warning and fault codes. Warning: 88 ⚠ flashing with warning Fault: 88 🔴 flashing with fault code.
Battery Information	
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.




In AC mode, it will present battery charging status.				
Status	Battery voltage	LCD Display		
Constant Current mode/Constant Voltage mode	<2V/cell	4 bars will flash in turns		
	2v/cell~2.083v/cell	Bottom bar will be on and the other three bars will flash in turns.		
	2.083v/cell~2.167v/cell	Bottom two bars will be on and the other two bars will flash in turns.		
	>2.167V/cell	Bottom three bars will be on and the top bar will flash.		
Batteries are fully charged.		4 bars will be on.		
In battery mode, it will present battery capacity.				
Load Percentage	Battery Voltage	LCD Display		
Load >50%	<1.717V/cell			
	1.717V/cell~1.8V/cell			
	1.8V/cell~1.883V/cell			
	>1.883 V/cell<1.817V/cell			
50%>Load>20%	<1.817V/cell			
	1.817V/cell~1.9V/cell			
	1.9 V/cell~1.983V/cell			
	>1.983 V/cell			
Load<20%	<1.867V/cell			
	1.867V/cell~1.95V/cell			
	1.95V/cell~2.033V/cell			
	>2.033 V/cell			
Load Information				
	Indicates overload.			
	Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%			
	0%~24%	25%~49%	50%~74%	75%~100%
Mode Operation Information				
	Indicates unit connects to the mains.			

	Indicates unit connects to the PV panel.
BYPASS	Indicates load is supplied by utility power.
	Indicates the solar charger circuit is working.
	Indicates the DC/AC inverter circuit is working.
Mute Operation	
	Indicates unit alarm is disabled

LCD Setting

Afer pressing and holding "ENTER" buton for 2 seconds, the unit will enter setting mode. Press "up" or "DOWN" buton to select setting programs. And then, press "ENTER" or "MENU" buton to confirm the selection and exit.

Setting Programs:

Program	Description	Selectable option	
00	Exit setting mode	Escape 	
01	Output source priority selection	(default) 	Solar energy provides power to the loads as first priority, If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time. The batery energy will supply power to the load only in the condition of the utility is unavailable. If the solar is unavailable the utility will charge the batery until the batery voltage reaches the setting point in program 21.If the solar is available, but the voltage is lower than the setting point in program 20, the utility will charge the batery until the batery voltage reaches the setting point in program 20 to protect the batery from damage.
			Solar energy provides power to the loads as first priority, If solar energy is not sufficient to power all connected loads, batery energy will supply power to the loads at the same time. Utility provides power to the loads only when batery voltage drops to either low-level warning voltage or the setting point in program 20 or solar and batery is not sufficient. The batery energy will supply power to the

			load in the condition of the utility is unavailable or the battery voltage is higher than the setting point in program 21(when BLU is selected) or program 20(when LBU is selected). If the solar is available, but the voltage is lower than the setting point in program 20, the utility will charge the battery until the battery voltage reaches the setting point in program 20 to protect the battery from damage.
		[0] SOL	Solar energy provides power to the loads as first priority. If battery voltage has been higher than the setting point in program 21 for 5 minutes, and the solar energy has been available for 5 minutes too, the inverter will turn to battery mode, solar and battery will provide power to the load at the same time. When the battery voltage drops to the setting point in program 20, the inverter will turn to bypass mode, utility provides power to the load only, and the solar will charge the battery at the same time.
		[0] UT,	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.
02	AC input voltage range	Appliances (default) [02] APL	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS [02] UPS	If selected, acceptable AC input voltage range will be within 170-280VAC.
		GEN [02] GEN	When the user uses the device to connect the generator, select the generator mode.
		VDE [02] VDE	If selected, acceptable AC input voltage range will conform to VDE4105(184VAC-253VAC)
03	Output voltage	[03] 230	Set the output voltage amplitude, (220VAC-240VAC)
04	Output frequency	50HZ(default) [03] 230	60HZ
05	Solar supply priority	(default) [05] BLU	Solar energy provides power to charge battery as first priority. When the utility is available, if the battery voltage is lower than the setting point in program 21, the

			solar energy will never supply to the load or feed into the grid, only charge the battery.If the battery voltage is higher than the setting point in program 21, the solar energy will supply to the load or feed into the grid or recharge the battery.
		[05]LbU	Solar energy provides power to the loads as first priority.If the battery voltage is lower than the setting point in program 20, the solar energy will never supply to the load or feed into the grid, only charge the battery.If the battery voltage is higher than the setting point in program 20, the solar energy will supply to the load or feed into the grid or recharge the battery.
06	Overload bypass: When enabled,the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable [06]bYd	Bypass enable(default) [06]bYE
07	Auto restart when overload occurs	Restart disable(default) [07]Lfd	Restart enable [07]LFE
08	Auto restart when over temperature occurs	Restart disable(default) [08]tfd	Restart enable [08]tFE
10	Charger source priority:To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode,charger source can be programmed as below:	
		Solar first [10]CS0	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility(d fault) [10]SNU	Solar energy and utility will charge battery at the same time.
		Only Solar [10]OS0	Solar energy will be the only charger source no matter utility is available or not
		If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
11	Maximum charging	MPPT solar charger charging current	
		60A (default)	Setting range is from 1 A to 120A.

	current:To configure total charging current for solar and utility chargers.(Max. charging current=utility charging current + solar charging current)	[1] 60 ^A	Increment of each click is 1A.
		80A (default) [1] 80 ^A	Setting range is from 1 A to 140A. Increment of each click is 1A.
		100A (default) [1] 100 ^A	Setting range is from 1 A to 160A. Increment of each click is 1A.
13	Maximum utility charging current	30A (default) [13] 30 ^A	Setting range is from 1A to 60A. Increment of each click is 1A.
14	Battery type	AGM(default) [14] AGM	Flooded [14] FLD
		GEL [14] GEL	LEAD [14] LEA
		Lithium Ion [14] LI	User-Defined [14] USE
		If "User-Defined" LI is selected, battery charge voltage and low DC cut-off voltage can be set up in program 17, 18 and 19.	
17	Bulk charging voltage(C.V voltage)	24V model default setting: 28.2V [17] CV 282 ^V	If "User-Defined" LI is selected in program 14, this program can be set up. Setting range is from 24.0V to 29.2V for 24Vdc model.Increment of each click is 0.1V.
		48V model default setting: 56.4V [17] CV 564 ^V	If "User-Defined" LI is selected in program 14, this program can be set up. Setting range is from 48.0V to 58.4V for 48Vdc model.Increment of each click is 0.1V.
18	Floating charging voltage	24V model default setting: 27.0V [18] FLV 270 ^V	If "User-Defined" LI is selected in program 14, this program can be set up, Setting range is from 24.0V to 29.2V for 24Vdc model.Increment of each click is 0.1V
		48V model default setting: 54.0V [18] FLV 540 ^V	
		If "User-Defined" LI is selected in program 14, this program can	

		be set up, Setting range is from 48.0V to 58.4V for 48Vdc model. Increment of each click is 0.1V.	
19	Low DC cut off battery voltage setting	24V model default setting: 20.4V [19]C04 20.4	
		If "User-Defined" LI is selected in program 14, this program can be set up. Setting range is from 20.0V to 24.0V for 24Vdc model. Increment of each click is 0.1V Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	
		48V model default setting: 40.8V [19]C04 40.8	
		If "User-Defined" LI is selected in program 14, this program can be set up. Setting range is from 40.0V to 48.0V for 48vdc model Increment of each click is 0.1V Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	
20	Battery stop discharging voltage when grid is available	Available options for 24V models:	
		24.0V (default) [20]230	Setting range is from 22.0V to 29.0V. Increment of each click is 0.1V.
		Available options for 48V models	
		48.0V (default) [20]460	Setting range is from 44.0V to 58.0V. Increment of each click is 0.1V
21	Battery stop charging voltage when grid is available	Available options for 24V models:	
		27.0V (default) [21]270	Setting range is from 22.0V to 29.0V. Increment of each click is 0.1V.
		Available options for 48V models:	
		54.0V (default) [21]540	Setting range is from 44.0V to 58.0V. Increment of each click is 0.1V.
22	Auto turn page	(default) [22]PLe	If selected, the display screen will auto turn the display page.
		[22]Pld	If selected, the display screen will stay at latest screen user finally switches.
23	Backlight control	Backlight on [23]LON	Backlight off (default) [23]LOF
24	Alarm control	Alarm on (default) [24]6ON	Alarm off [24]6OF

25	Beeps while primary source is interrupted	Alarm on [25]A0N	Alarm off (default) [25]A0F
27	Record Fault code	Record enable(default) [27]F0N	Record disable [27]F0F
28	Solar power balance. When enabled, the solar input power is automatically adjusted according to the connected load power	Solar balance enabled [28]5bE	If selected, the solar input power is automatically adjusted according to the following formula: Maximum solar input power = maximum battery charging power + connected load power, off-grid working mode.
		Solar balance enabled close (default) [28]5bd	If selected, the solar input power will be the same as the maximum, no matter how many loads are connected. The maximum battery charging power will be based on the set current in program 11 (PV maximum power = maximum battery charging power)
29	Power saving mode enable/disable	Saving mode disable(default) [29]5dS	If disable, no matter connected load is low or high, the on/off status of inverter output will not be effected.
		Saving mode enable [29]5eN	If enable, the output of inverter will be off when connected load is pretty low or not detected.
30	Battery equalization	Battery equalization [30]EeN	Battery equalization disable(default) [30]EdS
31	Battery equalization voltage	Available options for 24V models:28.8V [31]E4 288	
		Available options for 48V models:57.6V [31]E4 576	
		Setting range is from 24.0V to 29.2V for 24V model and 48.0V to 58.4V for 48V model. Increment of each click is 0.1V.	
33	Battery equalization time	60min(default) [33] 60	Setting range is from 5 min to 900min. Increment of each click is 5min.
34	Battery equalization timeout	120min(default) [34] 120	Setting range is from 5 min to 900min. Increment of each click is 5min.
35	Equalization interval	30days(default) [35]30d	Setting range is from 0 to 90days. Increment of each click is 1 day.

36	Equalization acti ated immediately	Enable [36]REN	Disable(default) [36]RdS
		If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to acti ate batery equalization immediately and LCD main page will shows "EQ" If "Disable" is selected, it will cancel equalization function until next acti ated equalization time arrives based on program 35 setting. At this time, "EQ" will be shown in LCD main page too.	
37	BMS control method	Voltage method (default) [37]40L	SOC Percent method [37]SOC
38	Batery stop discharging percent When SOC is available	20 % (default) [38] 20 %	Setting range is from 20% to 100% Increment of each click is 1 % .
39	Batery stop charging percent When SOC is available	95 % (default) [39] 95 %	Setting range is from 20 % to 100% Increment of each click is 1 % .
40	BMS communication	(default) [40] ,dP	when the communication between BMS and converter is faulted ,the converter still charge or discharge from the batery
		[40] Un1	when the communication between BMS and converter is faulted ,the converter stop charging or discharging from the batery








 
 




Afer pressing and holding "MENU" buton for 6 seconds, the unit will enter reset model. Press "up"and "DOWN"buton to select programs.

And then press "ENTER" buton to exit.


 






SEt	(default) [dt] nrt	Reset setting disable
	[dt] tSt	Reset setting disable






Fault Reference Code

Fault Code	Fault Cause	LCD Display
01	Fan is locked when inverter is off	[01]
02	Inverter transformer over temperature	[02]
03	Batery voltage is too high	[03]
04	Batery voltage is too low	[04]
05	Output short circuited	[05]
06	Inverter output voltage is high	[06]
07	Overload time out	[07]
08	Inverter bus voltage is too high	[08]
09	Bus soft start failed	[09]
11	Main relay failed	[11]
21	Inverter output voltage sensor error	[21]
22	Inverter grid voltage sensor error	[22]
23	Inverter output current sensor error	[23]
24	Inverter grid current sensor error	[24]
25	Inverter load current sensor error	[25]
26	Inverter grid over current error	[26]
27	Inverter radiator over temperature	[27]
31	Solar charger batery voltage class error	[31]

 

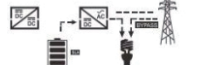 




32	Solar charger current sensor error	[32] 
33	Solar charger current is uncontrollable	[33] 
41	Inverter grid voltage is low	[41] 
42	Inverter grid voltage is high	[42] 
43	Inverter grid under frequency	[43] 
44	Inverter grid over frequency	[44] 
51	Inverter over current protection error	[51] 
52	Inverter bus voltage is too low	[52] 
53	Inverter soft start failed	[53] 
55	Over DC voltage in AC output	[55] 
56	Battery connection is open	[56] 
57	Inverter control current sensor error	[57] 
58	Inverter output voltage is too low	[58] 



Warning Indicator

Warning Code	Warning Event	Icon flashing
61	Fan is locked when inverter is on	[61] 
62	Fan 2 is locked when inverter is on.	[62] 
63	Battery is over-charged.	[63] 
64	Low battery	[64] 
67	Overload	[67]  
70	Output power derating	[70] 
72	Solar charger stops due to low battery	[72] 

73	Solar charger stops due to high PV voltage	[73] 
74	Solar charger stops due to over load	[74] 
75	Solar charger over temperature	[75] 
76	PV charger communication error	[76] 
77	Parameter error	[77] 

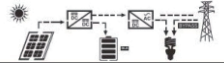 Operating State Description

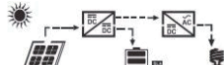Operating State	Description	LCD display
Sell state Note: *Sell mode: The system generates electricity when the sun shines, supplying power to your home and sending any excess power back to the grid	PV energy is sold back to grid.	PV energy power is larger than inverter power 
		PV energy power is smaller than inverter power 
		PV is off 
Charge state	PV energy and grid can charge batteries.	
Bypass state	Error are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	
Off-Grid state	The inverter will provide output power from battery and PV power.	Inverter power loads from PV energy. 
		Inverter power loads from battery and PV energy. 

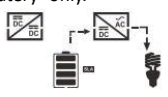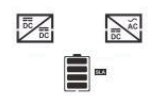  		<p>Inverter power loads from battery only.</p> 
Stop mode	The inverter stop working if you turn off the inverter by the soft key or error has occurred in the condition of no grid.	

Display Setting

The LCD display information will be switched in turns by pressing "up" or "DOWN" key. The selectable information is switched as below order: battery voltage, battery current, inverter voltage, inverter current, grid voltage, grid current, load in Watt, load in VA, grid frequency, inverter frequency, PV voltage, V charging power, PV charging output voltage, PV charging current.

Selectable information	LCD display	
Battery voltage/DC discharging current	520 ^{BATT} _V	480 _A
Inverter output voltage/Inverter output current	229 _V	130 ^{INV} _A
Grid voltage/Grid current	229 _V	80 ^{GRID} _A
Load in Watt	100 ^{LOAD} _W	120 _{VA}
Grid frequency/Inverter frequency	500 ^{INPUT} _{Hz}	500 ^{INV} _{Hz}
PV voltage and power	120 ^{PV} _V	200 ^{PV} _W
PV charger output voltage and PV charging current	510 ^{PV} _V	400 ^{OUTPUT} _A

SPECIFICATIONS

Table 1 Line Mode Specifications

INVERTER MODEL	5.2KW
Input Voltage Waveform	pure wave sine(grid/generator)
Nominal Input Voltage	230Vac
Low Loss Voltage	90Vac±7V(APL,GEN);170Vac±7V(UPS); 186Vac±7V(VDE)
Low Loss Return Voltage	100Vac±7V(APL,GEN);180Vac±7V(UPS); 196Vac±7V(VDE)
High Loss Voltage	280Vac±7V(UPS,APL,GEN); 253Vac±7V(VDE)
High Loss Return Voltage	270Vac±7V(UPS,APL,GEN); 250Vac±7V(VDE)
Max AC Input Voltage	300Vac
Nominal Input Frequency	50HZ/60HZ(Auto detection)
Low Loss Frequency	40HZ±1HZ(UPS,APL,GEN); 47.5HZ±0.05HZHZ(VDE)
Low Loss Return Frequency	42HZ±1HZ(UPS,APL,GEN); 47.5HZ±0.05HZHZ(VDE)
High Loss Frequency	65HZ±1HZ(UPS,APL,GEN); 51.5HZ±0.05HZHZ(VDE)
High Loss Return Frequency	63HZ±1HZ(APL,GEN,UPS); 50.05HZ±0.05HZ(VDE)
Output Short Circuit Protection	Line mode: Circuit Breaker Batery mode: Electronic Circuits
Efficiency (Line Mode)	>95%(Rated R load, batery full charged)
Transfer Time	10ms typical(UPS,VDE) 20ms typical(APL)
Output power derating:When AC input voltage drops to 95V or170V depending on models, the output power will be derated.	<p>230Vac model:</p> <p>The graph illustrates the output power derating for a 230Vac model. The y-axis represents Output Power, with markers for 50% Power and Rated Power. The x-axis represents Input Voltage, with markers for 90V, 170V, and 280V. The power is constant at the Rated Power level from 170V to 280V. At 170V, the power drops to 50% of the Rated Power. At 90V, the power drops to 0.</p>

Table 2 Inverter Mode Specifications

INVERTER MODEL	5.2KW DC48V
Rated Output Power	5200W
Output Voltage Waveform	Pure Sine Wave
Output Voltage Regulation	230Vac±5 %
Output Frequency	60Hz or 50Hz
Peak Efficiency	90%
Overload Protection	5s@>150% load; 10s@110%~150% load
Nominal DC Input Voltage	48Vdc
Cold Start Voltage	46.0Vdc
Low DC Warning Voltage	44.0Vdc
@ load < 20%	42.8Vdc
@ 20% < load < 50%	40.4Vdc
@ load > 50%	
Low DC Warning Return Voltage	46.0Vdc
@ load < 20%	44.8Vdc
@ 20% < load < 50%	42.4Vdc
@ load > 50%	
Low DC Cut-off Voltage	42.0Vdc
@ load < 20%	40.8Vdc
@ 20% < load < 50%	38.4Vdc
@ load 2 50%	
High DC Recovery Voltage	58Vdc
High DC Cut-off Voltage	60Vdc
no-load power consumption	<75W

Table 3 Charge Mode Specifications

Utility Charging Mode		
INVERTER MODEL	5.2 KW DC48V	
Charging Current @ Nominal Input Voltage	1~60A	
Floating charging voltage	AGM / Gel/LEAD Battery	54.8Vdc
	Flooded battery	54.8Vdc
Bulk charging voltage (C.Vvoltage)	AGM / Gel/LEAD Battery	57.6Vdc
	Flooded battery	56.8Vdc
Charging Algorithm	Three-stage charge(AGM/GEL/LEAD-ACID BATTERY),Four-stage charge(LITHIUM BATTERY)	
Solar Charging Mode		
INVERTER MODEL	5.2KW DC48V	

SPECIFICATIONS

Rated Power	5200 W
solar charging current	80A
Max.PV Array Open Circuit Voltage	450Vdc
PV Array MPPT Voltage Range	130~450Vdc
Min battery voltage for PV charge	40Vdc
Standby Power Consumption	2W
PWM charger	
PV Voltage Accuracy	60A
PV array voltage	450Vdc
PV charging min battery voltage	40Vdc
Battery Voltage Accuracy	+/-0.3%
PV Voltage Accuracy	+/-2V
Charging Algorithm	3-Step(Flooded Battery, AGM/Gel/LEAD Battery),4-Step(LI)
Charging algorithm for lead acid battery	
Charging algorithm for Lithium battery	
Joint Utility and Solar Charging	
INVERTER MODEL	5.2KW DC48V
	MPPT
Max Charging Current	80A
Default Charging Current	60A

Table 4 General Specifications

INVERTER MODEL	5.2KW DC48 V
Safety Certification	CE
Operating Temperature Range	-20 °C to 50°C
Storage temperature	-25 °C~ 60°C
Dimension(D*W*H),mm	468 x 330 x 199
Net Weight, kg	10.0

TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3seconds and then complete off.	The battery voltage is too low(<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on	No indication.	1. The battery voltage is far too low.<1.4V/Cell) 2. Battery polarity is connected reversed. Input protector is tripped	1. Check if batteries the wiring are connected and well. 2. Recharge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power(Shore or Generator)	1. Check if AC wires are tight in and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct.(Appliance=>wide)
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 01	Fan fault	Replace the fan.
	Fault code 02	Internal temperature of inverter component is over 100C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 03	Battery is over-charged.	Return to repair center.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
	Fault code 06/58	Output short out	Check if wiring is connected well and remove abnormal load.
Output abnormal (Inverter voltage)		1. Reduce the connected load.	

		below than 202Vac or is higher than 253Vac)	2. Return to repair center
	Fault code 07	Overload error The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment
	Fault code 08/09/53/57	Internal components filed.	Return to repair center.
	Fault code 51	Over current or surge	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low	If the battery is connected well. please return to repair center.
	Fault code 55	Output voltage is unbalanced	
	Fault code 56	Battery is not connected well or fuse is burnt.	

Appendix: Approximate Back-up Time Table

Model	Load(W)	Backup Time@48Vdc 100Ah(min)	Backup Time@48Vdc 200Ah(min)
2KW	200	766	1610
	400	355	766
	600	198	503
	800	139	339
	1000	112	269
	1200	95	227
	1400	81	176
	1600	62	140
	1800	55	125
	2000	50	112
3KW	300	449	1100
	600	222	525
	900	124	303
	1200	95	227
	1500	68	164
	1800	56	126
	2100	48	108
	2400	35	94
	2700	31	74
	3000	28	67

SPECIFICATIONS

Model	Load(W)	Backup Time@48Vdc 100Ah(min)	Backup Time@48Vdc 200Ah(min)
3KW	300	1054	2107
	600	491	1054
	900	291	668
	1200	196	497
	1500	159	402
	1800	123	301
	2100	105	253
	2400	91	219
	2700	71	174
4KW	3000	63	155
	400	766	1610
	800	335	766
	1200	198	503
	1600	139	339
	2000	112	269
	2400	95	227
	2800	81	176
	3200	62	140
5KW	3600	55	125
	4000	50	112
	500	613	1288
	1000	268	613
	1500	158	402
	2000	111	271
	2500	90	215
	3000	76	182
	3500	65	141
4000	50	112	
4500	44	100	
5000	40	90	

Note: Backup time depends on the quality of the battery, age of battery and type of battery.

Specifications of batteries may vary depending on different manufacturers.